

*“It is vital that student
Chromebooks stay up to
date in order to operate as
well as they can.”*

– EVA IT Tech

Your Chromebook Operating System may not be fully updated.

To minimize “glitches” please
follow the directions to the right.

What do I do?

1. Plug your Chromebook into power.
2. Login to your Chromebook.
3. In the bottom right corner click on the time.
4. Click on the Settings Cog  in the top right of the box that pops up.
5. A new window opens for Settings.
6. At the bottom left of the Settings window please select 'About Chrome OS'.
7. At the top middle (beneath the Chrome logo) it should have 'Check for Updates' button.
8. Press the 'Check for updates' button.
9. The Chromebook will update (sometimes it can take 5-10 minutes).
10. A 'Restart' button will appear next to a completion message. Press the restart button.

Now your Chromebook will be updated to ensure the best performance.

